

INSTALLATION INSTRUCTIONS Maximizer™ Agitation Bin

1501 Westpark Drive, Suite 5 • Little Rock, Arkansas 72204 • 800-872-3490 International + 501-664-1318




PLEASE START HERE:

Instruction Rev.A 20220125

If you use your own shelving, each shelf span must support, without sagging, 25 lbs (11kg) for each 3 gallon bin, 45 lbs (20kg) for each 5 gallon bin, and 150 lbs (68kg) for the 12 gallon bin (90# (40kg) rated capacity). A 48" by 12" deep metal grocery gondola shelf is typically rated to hold 500 lbs, but check with the manufacturer. If you wall mount a shelf, heavy duty brackets every 16" on center screwed to the shelf is required. If you design your own custom cabinets, contact our professional designer if you have any questions. ALWAYS INSPECT GRAVITY BINS DAILY TO ENSURE THE BINS ARE SECURE ON THE SHELF.


PRE-CLEAN PARTS

Visit http://www.tradefixtures.com/cleaning for instructions on bin and department cleaning. Lightly apply corn starch on "O" ring and door seal in installation to reduce drag/friction.

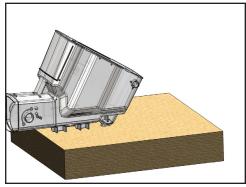


1. REST BIN BODY ON FLAT SURFACE

Locate plastic bin body of the Maximizer™ Bin and lay it on a flat surface.

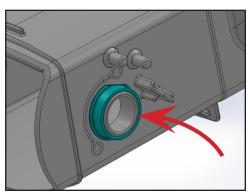


2. INSTALL BAND BUSHING

Align band bushing and snap into place onto the neck of the bin.

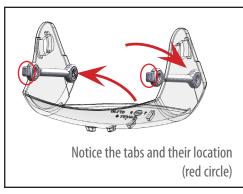


3. INSTALL DOOR RETURN BANDS

Locate the door. Align the door return band end w/out the tab and push into place at location as shown.

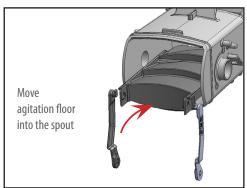




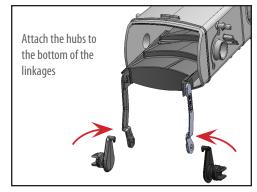

4. INSTALL AGITATION FLOOR AND LINKAGES/HUBS

Align the agitation floor with the spout and slide it into the spout. Attach the linkages to the agitation floor (there is a left and right linkage). Attach hubs onto each linkage.

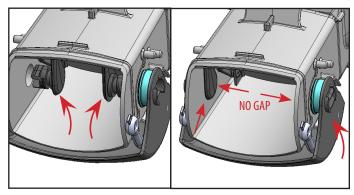


5. SNAP IN HUBS


Slide door in position. Then snap in hubs.





INSTALLATION INSTRUCTIONS Maximizer™ Agitation Bin

1501 Westpark Drive, Suite 5 • Little Rock, Arkansas 72204 • 800-872-3490 International + 501-664-1318

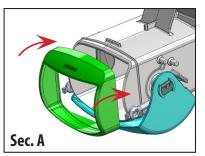

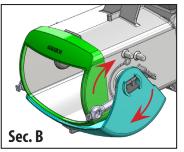

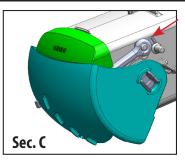

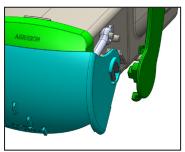



6. INSTALL DOOR GASKET AND ATTACH DOOR RETURN BANDS

With the door rotated in its widest, opened position as shown, align the spout gasket and push into place (Sec. A). Rotate the door while grabbing the tabbed ends of the door return bands (Sec. B). Align the bands and slide onto the post as shown in (Sec. C).

7. ATTACH HANDLE


Align handle with door and press firmly until the handle is 1/16" from door. Do this x2

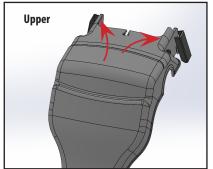


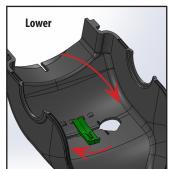


8. PREPARE FOR SPOUT ASSEMBLY

There are two pieces which snap together to form the dispensing chute of the Maximizer Bin. An upper, and lower spout with a flow control adjustment slider. Attach the two black clips on the upper spout, and insert the adjustment slider as shown into the lower.

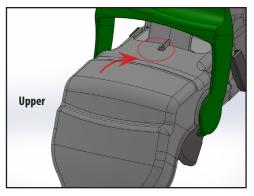

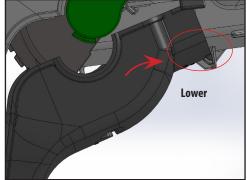


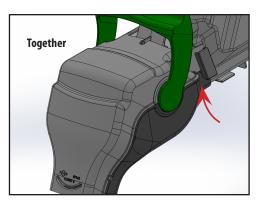



9. ASSEMBLING THE SPOUT (TO THE NECK OF THE BIN BODY)

Locate the upper and lower spouts and slide back into place as shown using the upper and lower alignment guides.

Once the two pieces are together, ensure the black clip aligns with the securing tab on the lower spout.

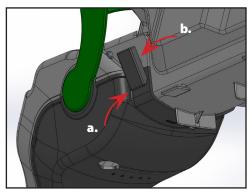

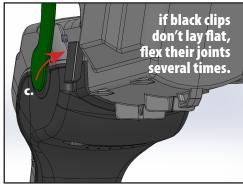

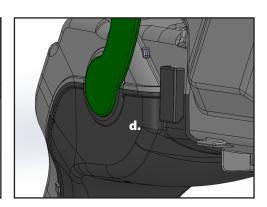


10. SECURING THE SPOUT

On each side of the bin, use the black clip to secure (lock) the spout to the bin assembly. This is done by verifying the two spout halves are aligned and latch at point (a) while pulling the top of the clip towards you (b) and then pushing the top of the clip back towards the bin (c). You should feel the clip snap into place (d).




INSTALLATION INSTRUCTIONS Maximizer™ Agitation Bin

1501 Westpark Drive, Suite 5 • Little Rock, Arkansas 72204 • 800-872-3490 International + 501-664-1318

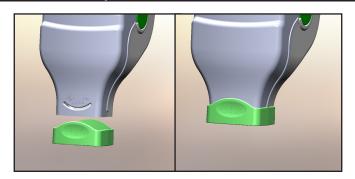


11. INSTALL THE BAG GRIP


At the bottom of the spout you will see a curved slot. Look inside of the bag grip, and slide the bag grip up and into place.

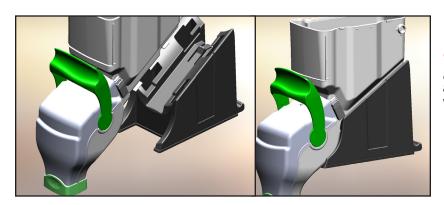

12. ATTACHING THE BASE STAND


Align the bin body with the black base stand as shown. The bin will rest and slide down into position. Once you feel or hear it lock into place, visually inspect to make sure the base stand is secure to the bin body.

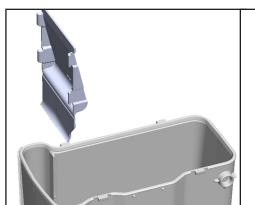


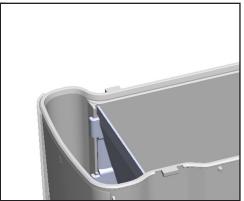


13. INSERTING THE BAFFLE

Insert Baffle into main body of the dispenser and press down into position.

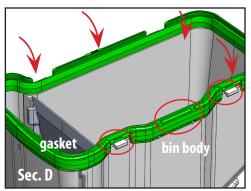

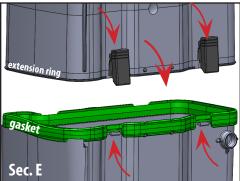

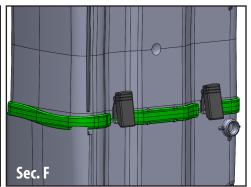

14. ATTACHING THE EXTENSION RING WITH GASKET SEAL TECHNOLOGY (GST)


Locate the extension ring gasket and install on the top of the bin body. Using the alignment guides / notches on the gasket walk the gasket down onto the bin body by pushing downward in (Sec. D). Locate the extension ring, and install the 4 black clips on the tabs as shown in (Sec. E). The extension ring rests in the gasket.


Make sure the black clip aligns with the securing tab on the bin body (Sec. F).




INSTALLATION INSTRUCTIONS Maximizer™ Agitation Bin


1501 Westpark Drive, Suite 5 • Little Rock, Arkansas 72204 • 800-872-3490 International + 501-664-1318

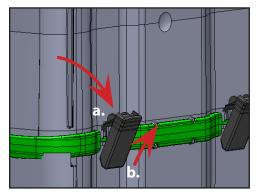

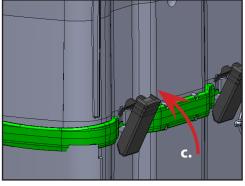

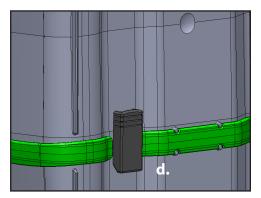


15. SECURING THE EXTENSION RING
On each side of the extension ring, use the black clip to secure (lock) the ring to the bin body. This is done by verifying the ring and gasket are aligned and latch at point (a.) while pulling the top of the clip towards you (b.) and then pushing the top of the clip back towards the bin (c.) You should feel the clip snap into place (d.)

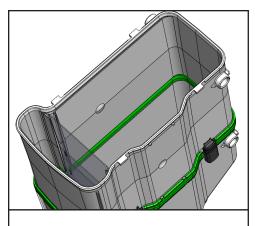





The lid should snap into place and you can feel and hear it.

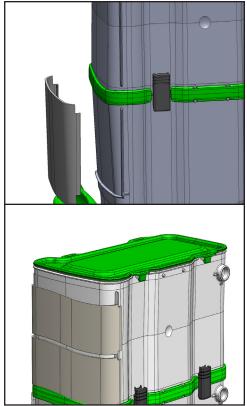

17. PLACE UPC/LABEL **HOLDER ON BIN**

Place the UPC / product label holder on the bin by snapping it onto the bin body. You can also put a label on each of the expansion rings. Merchandise and sell.

